



## 1 CHARGE DEVICES


Ensure all devices shown for each kit are fully charged before use.




**UNIVERSAL KIT**




8 UNIVERSAL ANCHORS




2 WRISTBAND TRACKERS




2 UNIVERSAL MOBILES




2 Dot TRACKERS  
CR2032 battery included




**PoE KIT**



2 WRISTBAND TRACKERS




2 UNIVERSAL MOBILES




2 Dot TRACKERS  
CR2032 battery included


## 2 ARRANGE ANCHORS



**UNIVERSAL KIT**


Turn the Anchor devices on. Arrange the Anchors, following one of our suggested Anchor layouts.

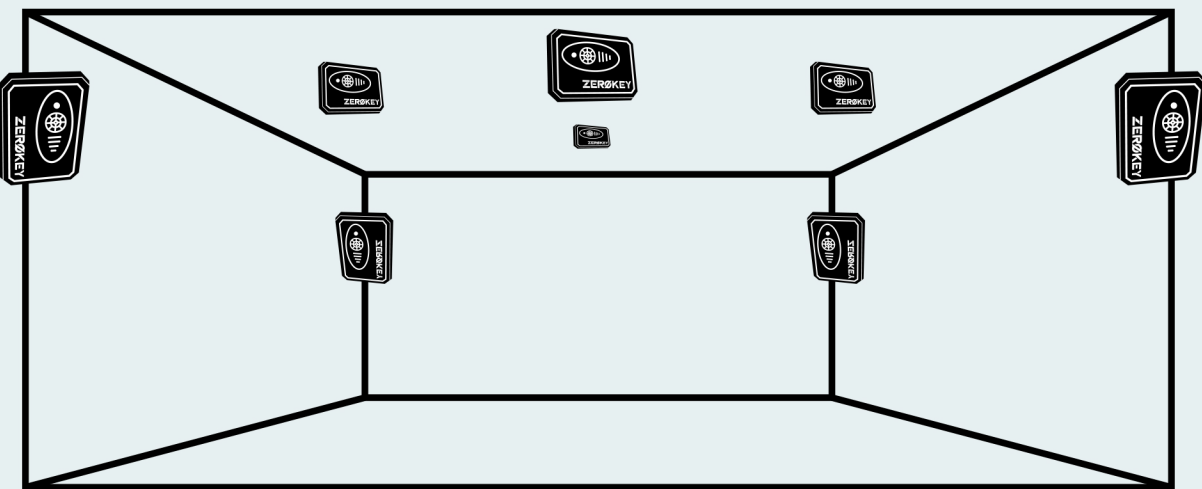




**PoE KIT**

Arrange the Anchors, following one of our suggested layouts. Plug in the PoE Injector, and daisy-chain all 8 Anchors.

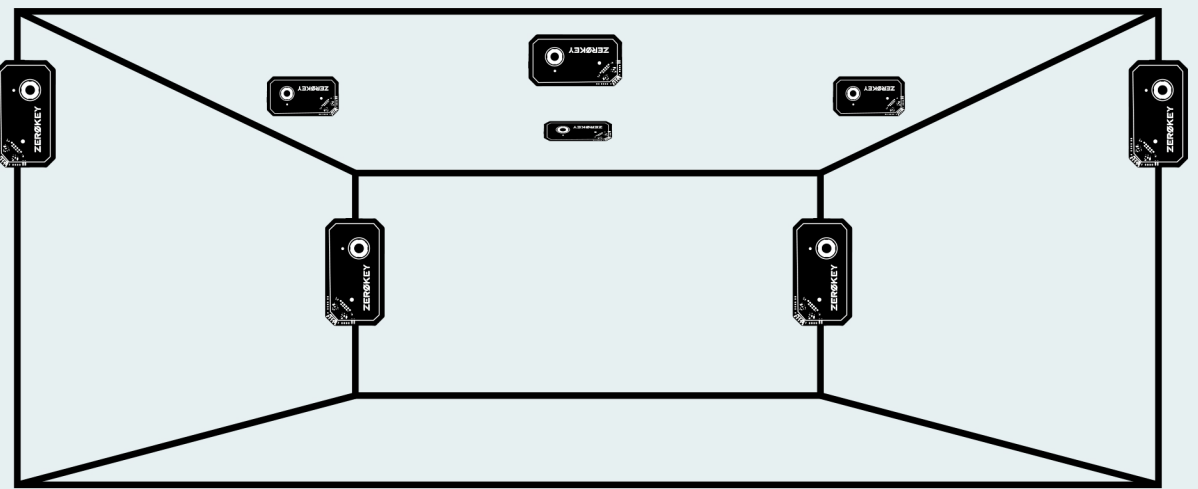


## 3 DOWNLOAD SDK

Download and install ZeroKey's Software Development Kit (SDK).

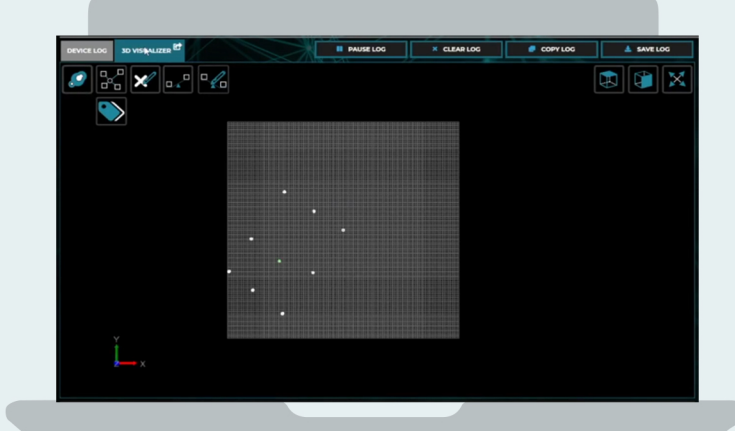

## 4 CONNECT TO GATEWAY

Plug the Gateway into a USB port on your computer.

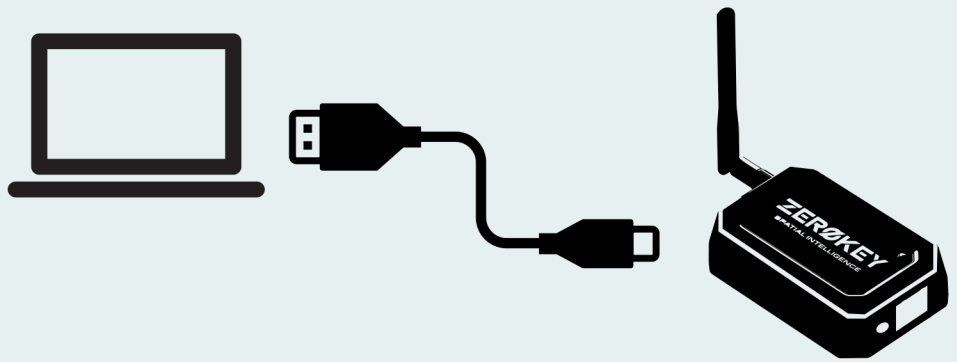

## 5 LAUNCH CONFIG TOOL

Open config tool and click **CONNECT**.



## 6 CALIBRATION

Navigate to the Calibration tab and click **CALIBRATE** to launch step by step instructions.

