

1 CHARGE DEVICES Ensure all devices shown for each kit are fully charged before use.



UNIVERSAL KIT



8 UNIVERSAL ANCHORS



2 WRISTBAND TRACKERS



2 UNIVERSAL MOBILES



2 DOT TRACKERS
CR2032 Battery Included



PoE KIT



2 WRISTBAND TRACKERS



2 UNIVERSAL MOBILES




2 DOT TRACKERS
CR2032 Battery Included

2 ARRANGE ANCHORS


UNIVERSAL KIT

Turn the Anchor devices on. Arrange the Anchors, following one of our suggested Anchor layouts.

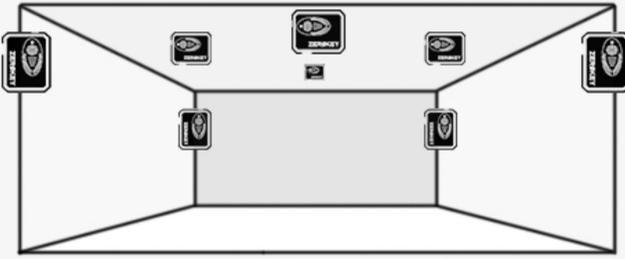


PoE KIT

Arrange the Anchors, following one of our suggested layouts. Plug in the PoE injector, and daisy-chain all 8 Anchors.

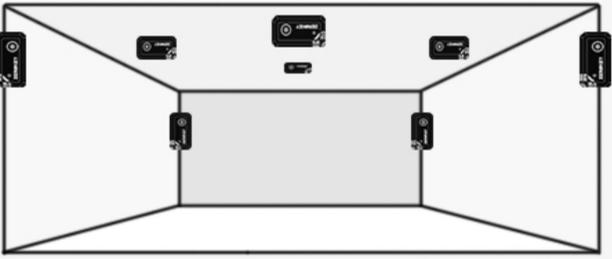


3 DOWNLOAD SDK

Download and install ZeroKey's Software Development Kit (SDK).

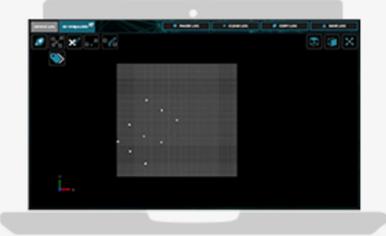

4 CONNECT TO GATEWAY

Plug the Gateway into a USB port on your computer.

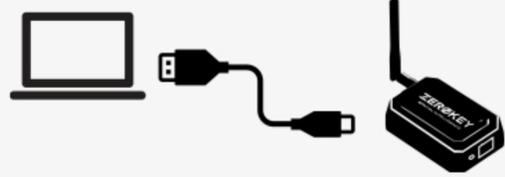

5 LAUNCH CONFIG TOOL

Open config tool and click **CONNECT**.



6 CALIBRATION

Navigate to the Calibration tab and click **CALIBRATE** to launch step by step instructions.

